

VIEWING CURRENT RECEIVER SETTINGS

+

GROUP CHANNEL TV
2 3 66

+

SHURE

+

802000


CHANGING RECEIVER SETTINGS	Changing Group/Channel Setting	Changing Frequency Setting	Changing Name Setting	Locking/Unlocking Receiver Settings	Changing Squelch Setting
	MENU []	MENU []	MENU []	MENU []	MENU []
	+ MENU -	+ MENU -	+ MENU -	+ MENU -	+ MENU -
	+	+	+	+	+
	SET G/CH	SET FREQ	SET NAME	SET LOCK	SET SOCH
	SELECT []	SELECT []	SELECT []	SELECT []	SELECT []
	GROUP CHANNEL TV 2 3 66	784.625	SHURE	CODE ? _	MID 00
	+ or -	+ or -	SELECT []	+ , - , +	+ or -
	GROUP CHANNEL TV 2 4 66	785.750	+ or -	CODE ? ***	+ 05
	SELECT []	MENU []	UHF NO 1	MENU []	MENU []
	GROUP CHANNEL TV 2 4 66	SAVE ? +YES -NO	MENU []	GROUP CHANNEL TV 2 4 66	SAVE ? +YES -NO
	+ or -	+ or -	SAVE ? +YES -NO		+ or -
	GROUP CHANNEL TV 3 4 66		+ or -		
	MENU []				
	SAVE ? +YES -NO				
	+ or -				

NOTE: Repeat the above sequence to Unlock the Receiver settings.


ACCESSING PROGRAM KEYS

1. Open battery compartment to access MODE and SET keys.

- U1. Press tabs on side of U1 to release latch, then flip battery compartment cover open.

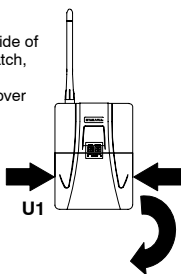

- U2. Unscrew U2 battery compartment cover and slide it down.

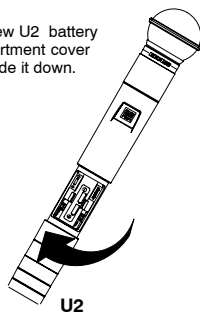

CHANGING GROUP SETTING

1. Press and hold MODE key.



2. Press and hold SET key until desired setting is reached.



3. Press MODE key twice to enter new setting.



CHANGING CHANNEL SETTING

1. Press MODE key twice.



2. Press and hold SET key until desired setting is reached.



3. Press MODE key again to enter new setting.



LOCKING/UNLOCKING POWER ON

1. Press and hold SET key.



2. Press the MODE key to lock power on.

 


3. Repeat Steps 1 and 2 to unlock power on function.




LOCKING/UNLOCKING FREQUENCY SETTING

1. Turn transmitter off.



 2. Press and hold SET key.



3. Turn transmitter back on while holding SET key. Then release SET key.



4. To unlock frequency setting, repeat Steps 1 - 3.

